



VALVE ADJUSTMENT INSTRUCTIONS


1. Hold gas spring valve up.
2. Insert DE-GAS adjuster knob on thread of the valve.
3. Press the DE-GAS adjuster knob with light hand force until you can hear the nitrogen escaping. Press only briefly to avoid too much nitrogen being discharged.
4. After adjustment, remove the DE-GAS adjuster knob, mount the end fittings and test the gas spring in your application. If necessary repeat the procedure.

500/800 27627 GAS RAM

SUITABLE FOR GATES EXCEEDING 0.75M AND UP TO 120KG.

GAS RAM DIMENSIONS

500N - PEDESTRIAN GATES
800N - LARGE SWING GATES

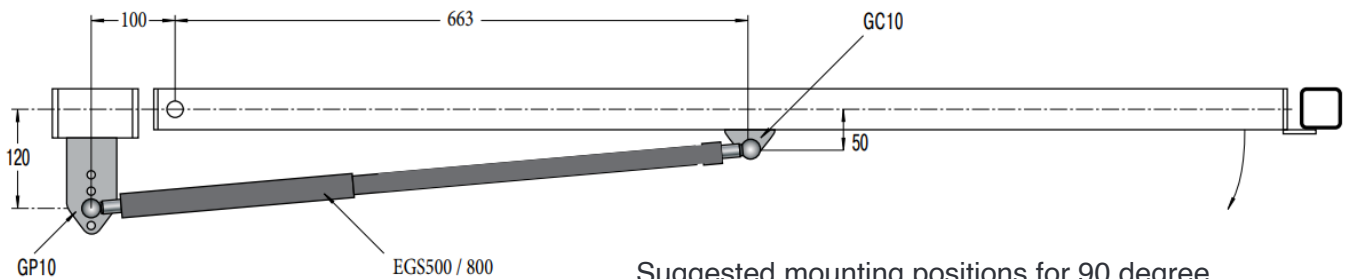

Suggested mounting positions for 90 degree opening of typical gate using a EGS-500 / 800.

EGS 500/800 BRACKETS TO SUIT ESG BALL JOINTS

